

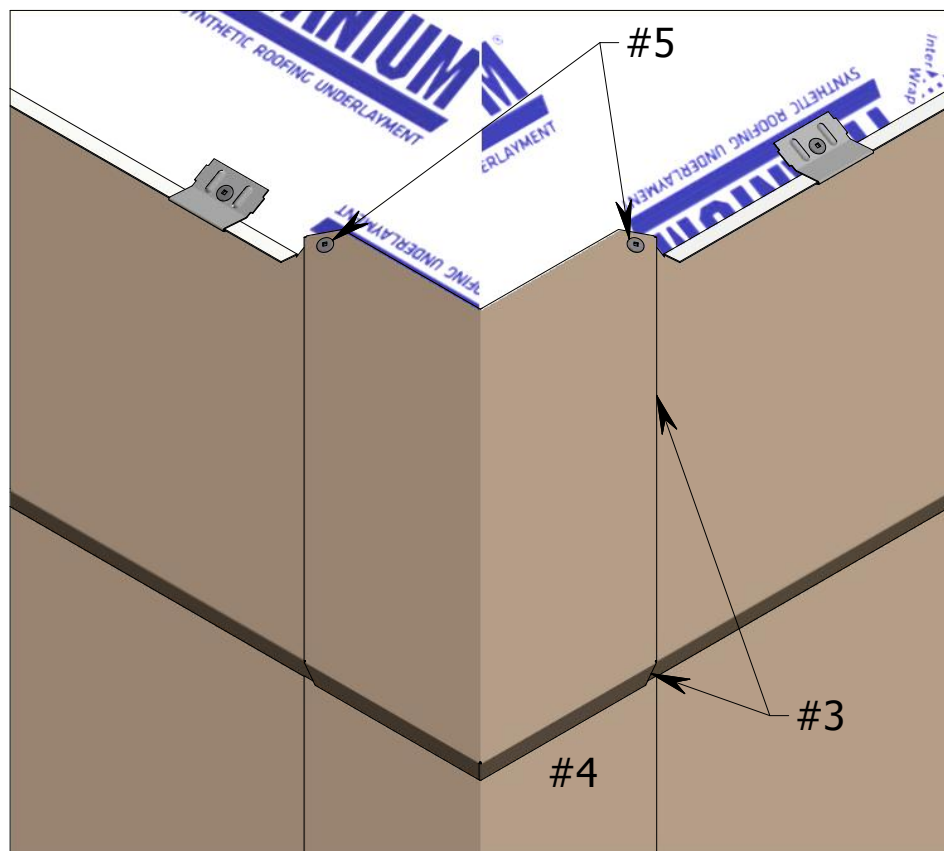



1. Install row of panels and cut to meet at hip
2. Field cut upper hem of panels and fold float to allow for installation of hip shingle

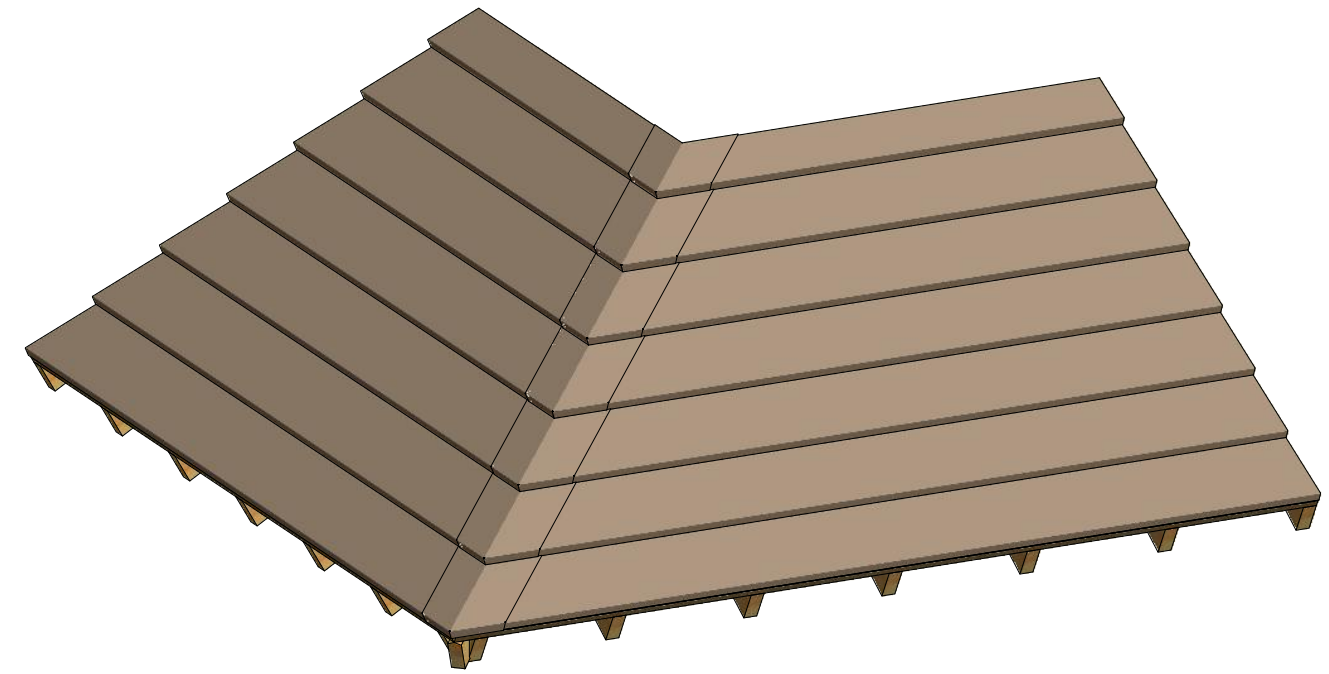

3. Seat Shingle in a continuous bead of sealant on both sides of hip
4. Ensure that panels fit firmly into nose of hip shingle
5. Secure hip shingle to substrate using appropriate fasteners (2 per piece)

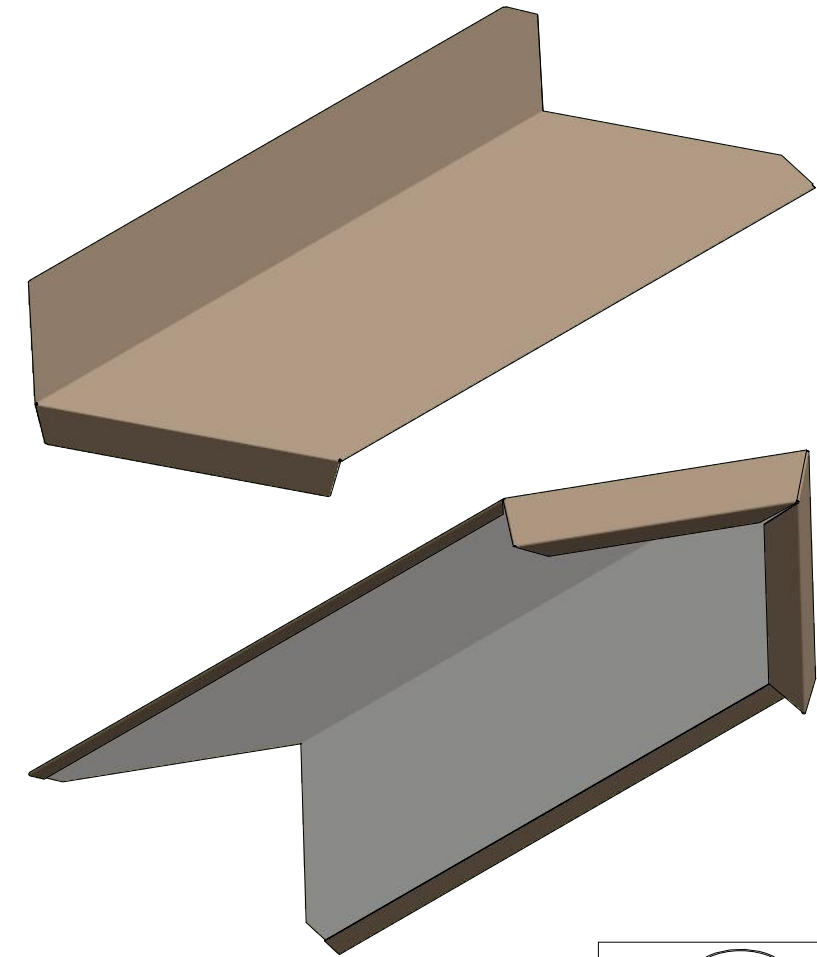

 <b>ATAS INTERNATIONAL, INC</b> Allentown PA 610-395-8445 Mesa AZ 480-558-7210		TITLE	
		Rumba Shake - Hip Shingle Detail	
DWG. NO.	DR	PJR	DATE
	APP		04-22-15
MATERIAL		SH. SIZE	SCALE
		B	X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP